

# K20H SINGLE CHANNEL VENDOR INSTRUCTIONS

## INSTALLATION:

ADA Regulations require this dispenser to be mounted in an unobstructed location with control knob 36 inches to 44 inches from the floor.

Remove the weight (part with the word "FRONT" stamped on it) from the cabinet. Place cabinet against wall in the desired position and mark location of 4 holes in back of the cabinet. Holes for screws should be drilled and the cabinet fastened to the wall.

**MOUNTING HARDWARE:** #10X1 Pan SMS Combo Head. Anchors determined by substrate being mounting to.

## LOADING

1. Remove product weight.
2. Insert 147-A, MT-4 or EGP200 napkins into channel and replace weight on top of product.
3. Empty coin tray, if paid vend.
4. Test. Insert coin(s), if paid vend, and vend product.
5. Be sure to REPLACE PRODUCT WEIGHT.


## SERVICE & REPAIR

If vendor does not work properly, check items below:

1. Remove coins.
2. Product weight is in place.
3. Load with 147A, MT-4 or EGP200 only.
4. Rotor holding is in ready-to-dispense position, not on rotor.
5. Damaged Mechanism: Handle should spring back when turned without coin.

## TO REMOVE COIN MECHANISM

1. Remove weight and product.
2. Remove rotor.
3. Use Phillips screwdriver to remove handle screw.
4. With 11/32 wrench or nut-driver remove carriage bolts (not screws).

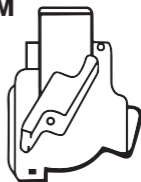

## IMPORTANT: LUBRICATION

In order to keep vendor operating efficiently, lubricate the coin mechanism slot and cabinet at the rear of the rotor occasionally with a silicone spray.

## PARTS LIST

PART#	DESCRIPTION
1. CM-(DENOMINATION) .....	COIN MECHANISM
2. LABEL-(DENOMINATION).....	LABEL
3. 2 ROTOR .....	ROTOR
4. NWGT.....	NAPKIN WEIGHT
5. H17 .....	DOOR LOCK
6. H17K.....	DOOR KEY



**Hospeco Brands Group**

**P: 800.942.9199**

**F: 216.279.0019**

**www.hospecobrands.com**

**info@hospecobrands.com**