


D1 Mounting Template

Mounting Instructions:

ADA Regulations require this dispenser be mounted in an unobstructed location with control knob 39 inches to 44 inches from floor.

1. Open Cabinet door with key provided (H17).
2. Remove the weights from the napkin and tampon channels.
3. Place cabinet against wall in the desired position and mark location of six holes in back of the cabinet.
4. Holes for screws should be drilled, and the cabinet fastened to wall per appropriate building codes. Anchors determined by substrate.
5. Mounting Hardware for ceramic wall, drywall and wood: #18-8 Metal Screws, not included.
6. UMC - End user should consult and purchase the proper screws from the local hardware store.

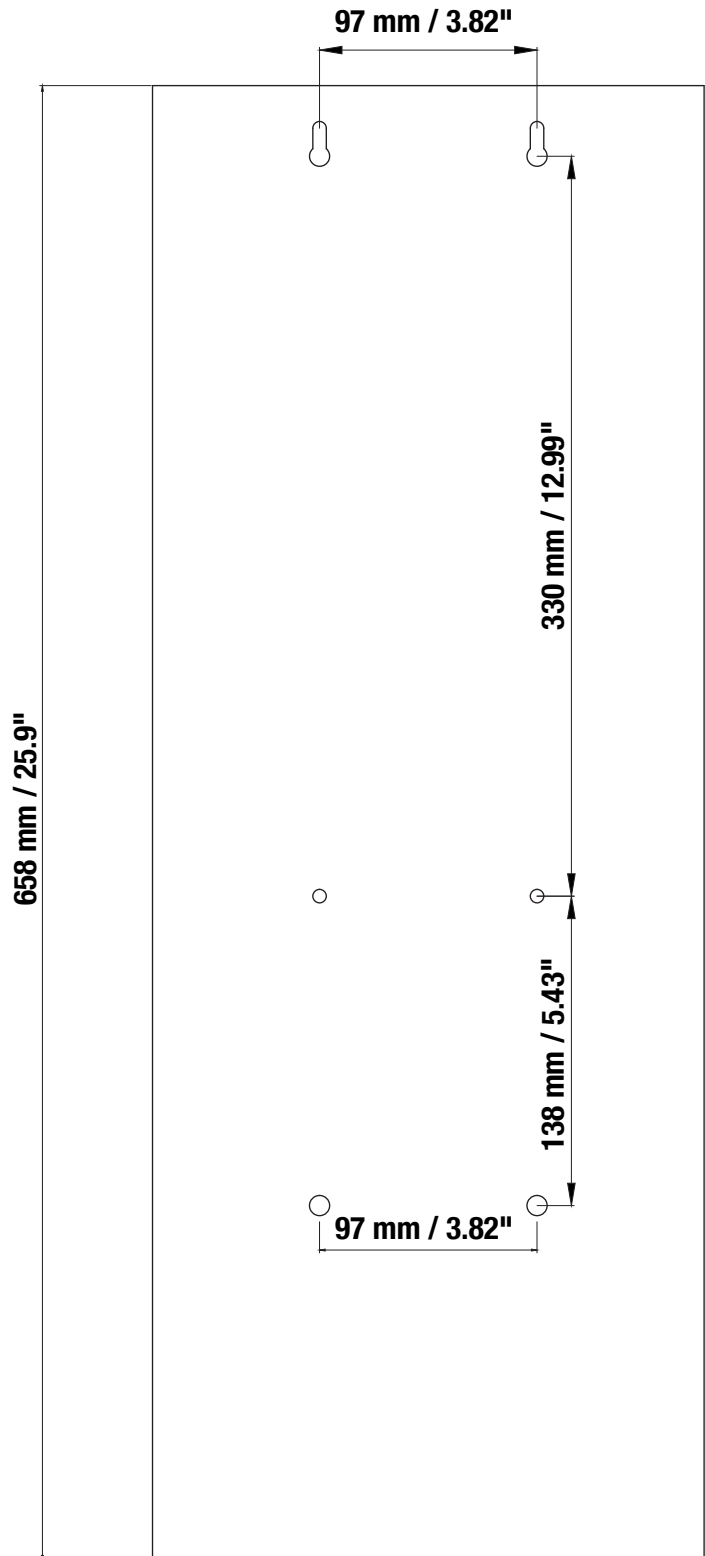




Use 0.25in Drill Bit for Anchor Holes



Use Yellow Anchor for Drywall
Each Anchor Supports 20lb




Use 0.125in Drill Bit for Wood



Use 0.25in Ceramic Drill Bit for Tiles



Use Screw for Wood and Anchors

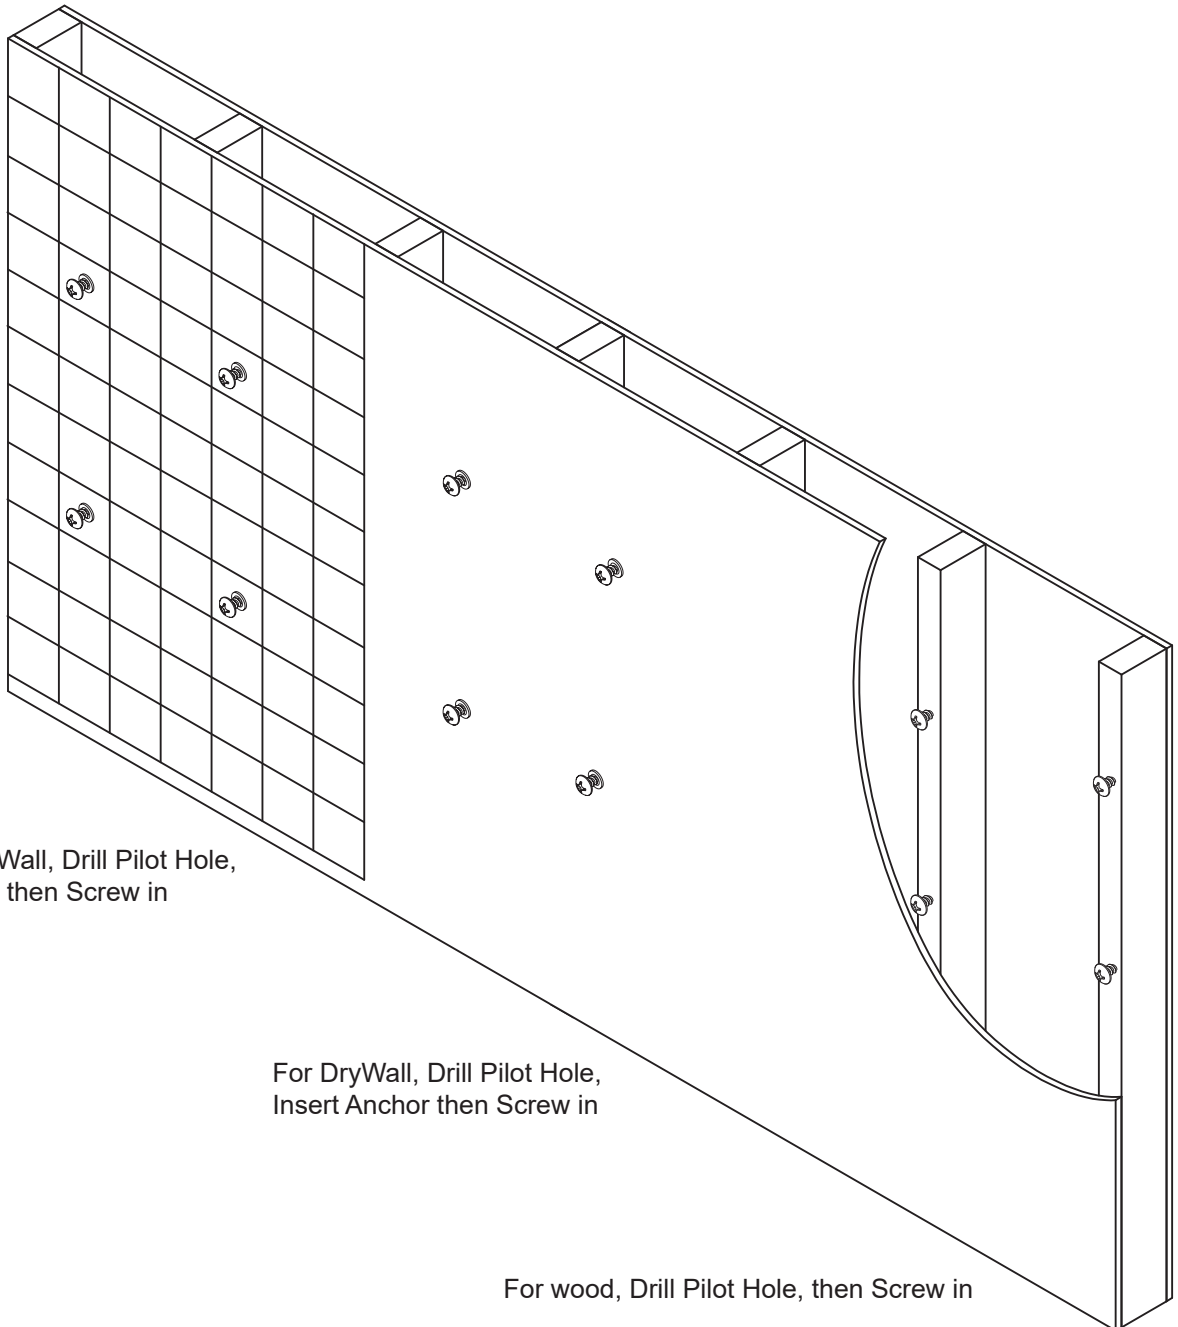

For Ceramic Wall, Drill Pilot Hole,
Insert Anchor then Screw in

For DryWall, Drill Pilot Hole,
Insert Anchor then Screw in

For wood, Drill Pilot Hole, then Screw in