


All-In-One White Waste Receptacle
Item# HS-6140WP


Mounting Instructions

Wall Mounting Screw Template

WALL MOUNTING

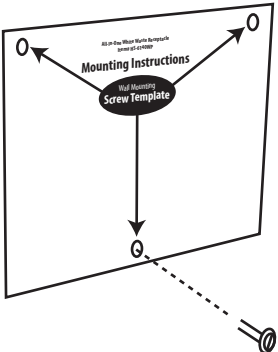


1. Locate screw in bottom position.

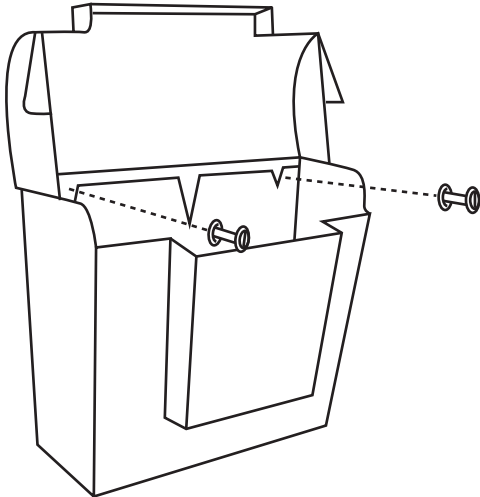

2. Remove inner basket.
Place receptacle on bottom screw.
Install top screws.
Replace inner basket.

BACK TO BACK MOUNTING

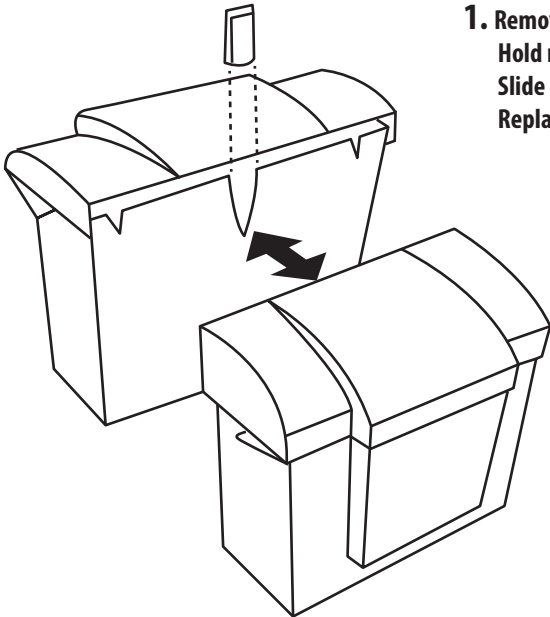

1. Remove inner basket.
Hold receptacles back to back.
Slide connector down over center slots.
Replace inner basket.

REORDER

Liner Bags: LBS500, LBM500, or HS-6141
Combination Dispenser Receptacle: HS-6140WP

Call your local Distributor or call Hospeco Brands Group at 800-942-9199 for the name of a Distributor nearest you.



Hospeco Brands Group
P: 800.942.9199
F: 216.279.0019
www.hospecobrands.com