


MOUNTING INSTRUCTIONS: ND-1E, ND-1W

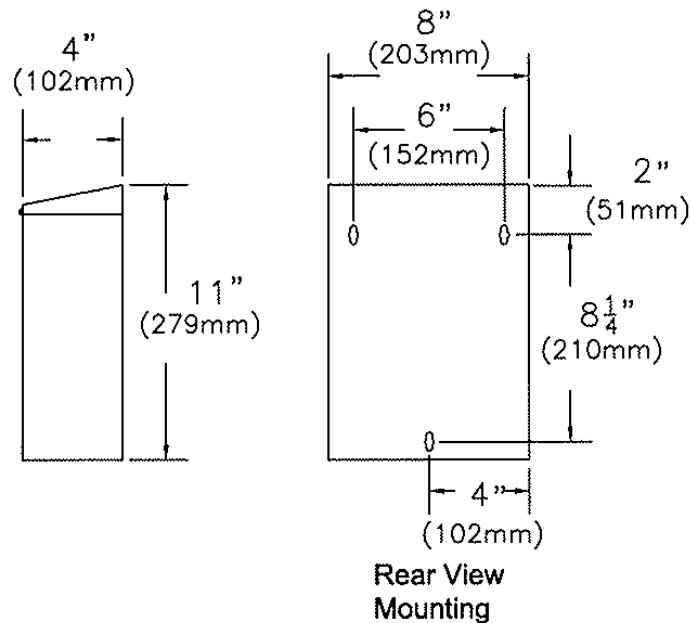

Installation:

Mount Unit with three (2) #10 x 1.5" Phillips pan head sheet metal screws and plastic anchors. Backing is recommended behind all surfaces. If wood blocking is not available, the following optional fasteners are suggested:

- Tile/Masonry - Plastic or lead anchors
- Plaster/Drywall - Toggle Bolts