
## **Evogen® High Capacity No-Touch Toilet Seat Cover Dispenser Mounting Template (Item EVNT1-HCW)**

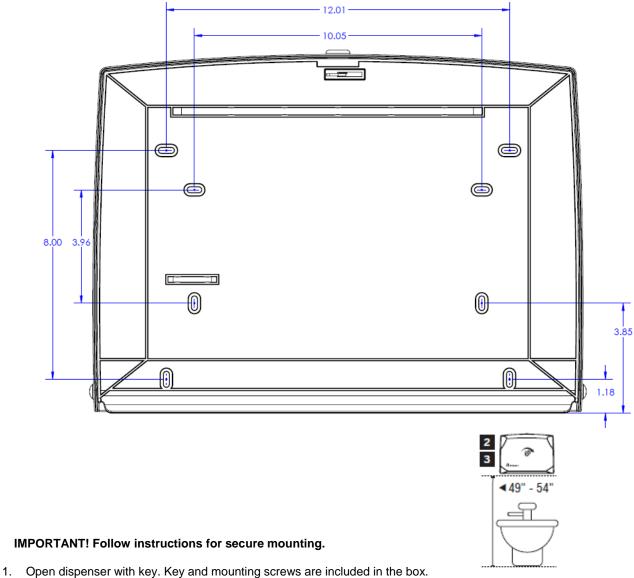

- 2. Mark the back wall 49" to 54" from floor line directly above the water tank or bowl as shown. Do not install on side walls.
- 3. With bottom of cabinet at proper level, place open dispenser back against wall and attach. (Note: Use 4 provided screws to secure. Use 1/4" drill bit for screws.)
- The back panel of the dispenser has 8 screw holes. You can choose to use the 4 OUTER holes or the 4 INNER holes to mount the dispenser
- This no-touch dispenser will only work with Evogen® Toilet Seat Cover Refills (EVNT-3125). With the printed front of the refill pack facing you, align the pegs inside the dispenser with the holes on both sides of the refill pack. Hang the refill package on the pegs. For maximum capacity you may load up to two (2) refill packs (full or partially used). DO NOT OVERLOAD dispenser.
- Insert (4) AA alkeline batteries (not included). We recommend name brand batteries only Duracell® or Energizer® brand.
- Close dispenser

