

# TAMPAX® TAMPON VENDOR INSTRUCTIONS

## Installation:

ADA Regulations require this dispenser be mounted in an unobstructed location with control knob 39 inches to 44 inches from floor.

Remove the weight (part with the word "FRONT" stamped on it) from the cabinet. Place cabinet against wall in the desired position and mark location of four holes in back of the cabinet. Holes for screws should be drilled and the cabinet fastened to the wall.

**Mounting Hardware:** #10X1" Pan SMS Combo Head. Anchors determined by substrate mounting to.

## LOADING

1. Remove product weight.
2. Insert TAMPAX® vended tampons into channel and replace weight on top of product.
3. Empty coin tray.
4. Test. Insert coin(s) and vend product.
5. Be sure to REPLACE PRODUCT WEIGHT.


## SERVICE & REPAIR

If vendor does not work properly, be sure:

1. Coins are removed.
2. Product weight is being used.
3. Loaded with TAMPAX® vended tampons (T-500).
4. Rotor holding is in ready-to-dispense position, not on rotor.
5. Mechanism is not damaged-Does handle spring back when turned without coin, should be good.

## TO REMOVE COIN MECHANISM

1. Remove weight and product.
2. Remove rotor.
3. Use Phillips screwdriver to remove handle screw.
4. With 11/32 wrench or nut-driver remove carriage bolts (not screws).

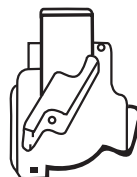

## IMPORTANT: LUBRICATION

In order to keep vendor operating efficiently, lubricate the coin mechanism slot and cabinet at the rear of the rotor occasionally with a silicone spray.

## PARTS LIST

PART #	DESCRIPTION:
1. CM-(DENOMINATION)	COIN MECHANISM
2. 6ROTOR	ROTOR
3. TWGT	TAMPON WEIGHT
4. H17	DOOR LOCK

## HOSPECO BRANDS GROUP

26301 Curtiss-Wright Pkwy Suite 200  
Cleveland, OH 44143  
Toll Free: (800) 942-9199

www.hospecobrand.com \* E-mail: info@hospecobrand.com