



## T25 Tampon Vendor

### Capacity:

25 - Vended Tampons

### Installation:

Mount directly to wall according to "T25 Mounting Template" on reversed side. Vendor must be secured with all four mounting apertures.

### Overall Dimension:

6.42" W x 25" H x 5.75" D


## ADA Guide: T25, Series Tampon Vendor Installation

The ADA Guidelines to be used for installing Hospeco Brands Group's T25 Series Tampon Vendors are as follows:

- Access to vendor should be 39" to 44" above the floor to allow forward and side reach by persons in wheelchairs.
- Unit should be operable with one hand and without tight grasping, pinching, or twisting of the wrist.
- Activation of the lever should not require more than 5 lbs. of force when unit is completely filled.
- **Do not mount Vendor in a Circulation Path.** A Circulation Path is defined by ADAAG as: "An exterior or interior way of passage provided for pedestrian travel, including but not limited to, walks, hallways, courtyards, elevators, platform lifts, ramps, stairways, and landings."

**Note:** Hospeco Brands Group's T25 Series Tampon Vendor mechanism meets the above ADA guidelines. The coin mechanism works with a 180° turn. A clenched fist can draw down the Z handle in a straight line, without twisting, with less than 5 lbs of force. Mounting of unit should be 74" to top of unit floor 60" for handicapped accessibility.

# T25 Mounting Template

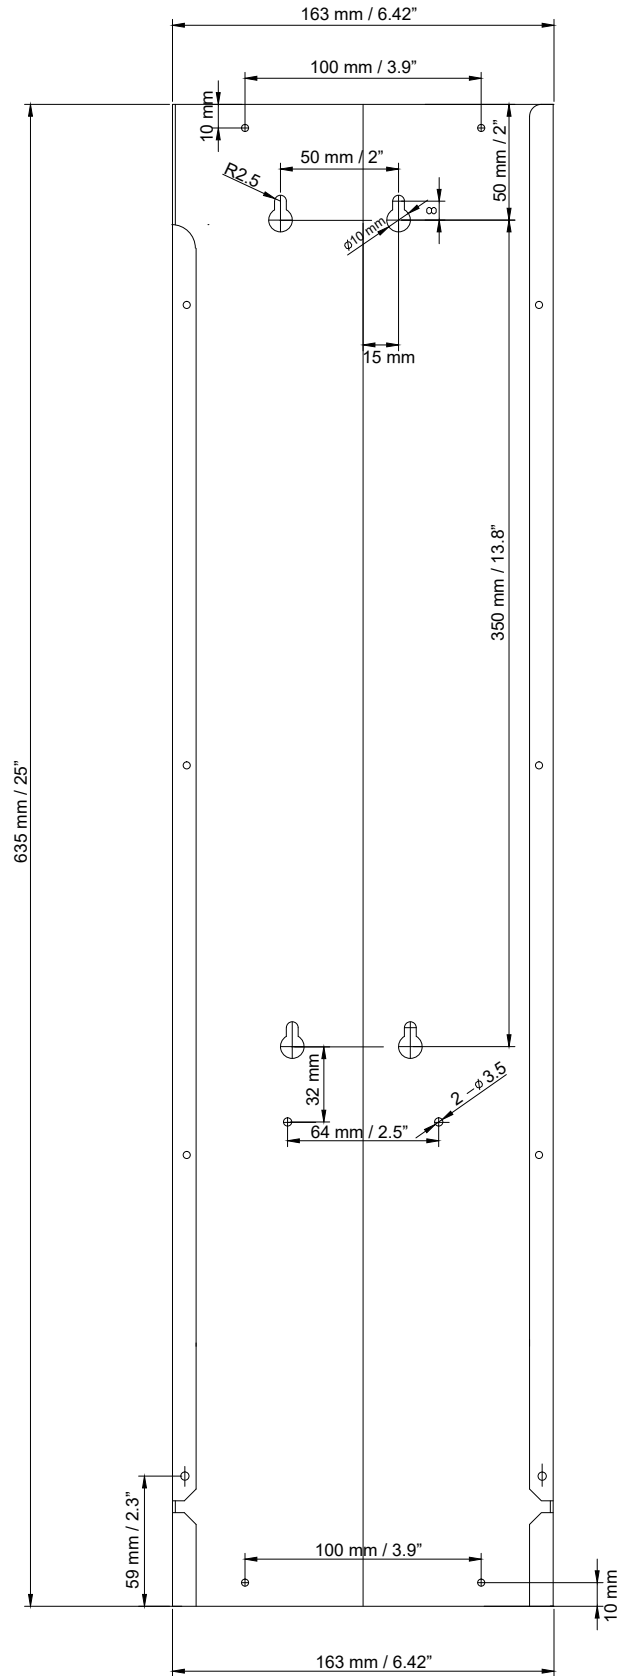

6.09.2022